



1. Before Using the Product

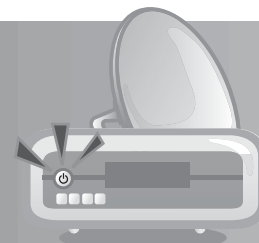

1.5 Remote Control

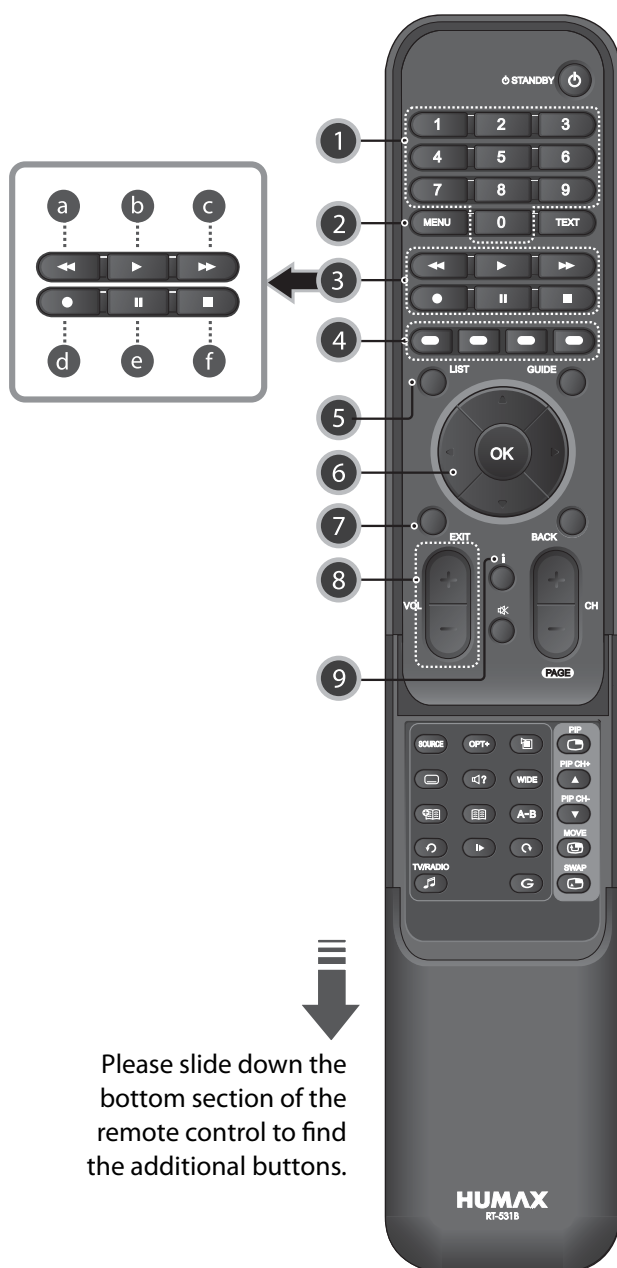

Please slide down the bottom section of the remote control to find the additional buttons.

Note: The remote control is subject to change without notice.

1. NUMERIC(0-9) BUTTONS

Enters a TV/radio channel number or menu option number.

2. MENU

Displays the main menu.

3. PLAYBACK CONTROL BUTTONS

a. FAST REWIND

Rewinds at high speed. Each time you press this button the rewind speed is increased.

b. PLAY

Plays at normal speed or resumes.

c. FAST FORWARD

Fasts forward at high speed. Each time you press this button the fast forward speed is increased.

d. RECORD

Records programme.

e. PAUSE

Pauses the live programme or recording.

f. STOP

Stops a recording or goes to the live programme.

4. COLOUR BUTTONS

Selects colour keys for interactive/text channels.

5. LIST

Displays the channel list.

6. ARROW BUTTONS

Navigates through the menu options.

7. EXIT

Exits all On-Screen Display (OSD) screens.

8. VOL+/VOL-

Adjusts the audio volume.

9. i (INFORMATION)

Displays the channel and programme information.

10. Installation



This chapter describes how to search for channels and other series of procedures.

Note:

- Press the **BACK** or ◀ button to save the changes and return to the previous menu. Press the **MENU** or **EXIT** button to exit from the menu screen.
- You can easily select all menu items using the assigned number for each menu.

10.1 Automatic Search

If your product is connected to the aerial and television, you can automatically search channels without entering any other information.

1. Press the **MENU** button.
2. Select **Installation** using the ▲/▼ button and press the **OK** or ► button.
3. Enter the password using the **NUMERIC(0-9)** buttons.
4. Select **Automatic Search** from installation menu using the ▲/▼ button and press the **OK** or ► button.
5. Automatic channel search begins.

Tip: The default password is **0000**. If you have forgotten your password, please contact your local product distributor.



1. Search

Wait while channel search continues. This may take a few minutes.

1. While operating search, the cursor is located at **Stop**. Therefore, if you press the **OK** button during searching, the operation is stopped and the channels found until then will be displayed.
2. If search operation is successfully completed and the channel does not exist, press the **OK** button and try to reset the search operation again if necessary.
3. You can delete unnecessary channels from the searched channels. Select the channels to delete and press the **OK** button. Then select **Delete** and press the **OK** button. To delete all channels, select **Select All** to select all channels, select **Delete** and press the **OK** button.
4. When completing channel search and deleting unnecessary channels, select **Save** and press the **OK** button to save the changes.



10. Installation



10.3 Default Setting

Default setting restores the product to the default settings.

Warning: Please note that once you perform default setting, all data such as channel list and user configured data are deleted, no information on the HDD will be lost.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** or **►** button.
3. Enter the password using the **NUMERIC(0-9)** buttons.
4. Select **Default Setting** using the **▲/▼** button and press the **OK** or **►** button.
5. Select **Yes** and press the **OK** button to restore all setting to factory default. Select **No** and press the **OK** or **BACK** button to return to the previous menu.
6. Confirm again to start loading default setting. Enter the password using the **NUMERIC(0-9)** buttons to perform restoring.
7. When completing the default setting, press the **OK** button to automatically run the installation wizard. For detailed information about the installation wizard, refer to **Chapter 3. Installation Wizard**.



Tip: The default password is **0000**. If you have forgotten your password, please contact your local product distributor.

10.4 Antenna Power

Make sure to set the **Antenna Power** to **On** when you connect an active antenna to the **ANTENNA IN** connector on the rear of the product.

1. Press the **MENU** button.
2. Select **Installation** using the **▲/▼** button and press the **OK** or **►** button.
3. Select **Antenna Power** from the installation menu using the **▲/▼** button.
4. Press the **OK** or **►** button to select **On/Off**.

On	5V power supply from the active antenna cable. +5V/50mA (max.)
Off	No power supply.



Note:

- Active antenna is a portable or indoor antenna which needs power supply from the product because it does not have power cord for itself.